



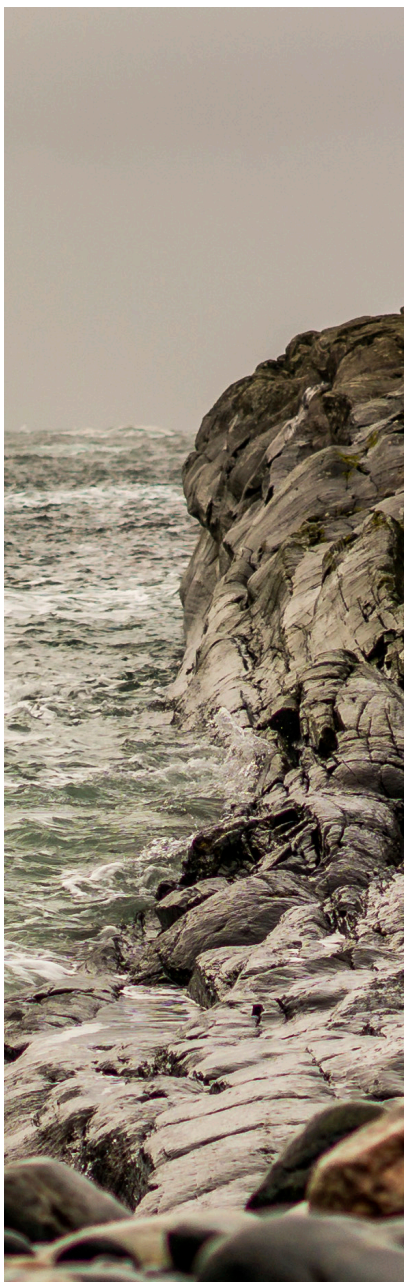

RC8 User Manual

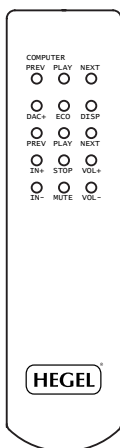

RC8 - Remote Control



Remote Control Buttons (from top left)

1. Skip to previous track on most computers/media players
2. Play/Pause on most computers/media players
3. Skip to next track on most computers/media players
4. Input source selector button for Hegel DACs
5. ECO will put certain Hegel equipment in low power mode
6. Display on/off (hold for off)
7. Skip to previous track on Hegel CD-players
8. Play/Pause for Hegel CD-players
9. Skip to next track on Hegel CD-players
10. Switches to next input on your Hegel product
11. Stop/Eject for Hegel CD-players
12. Volume up for Hegel products
13. Switches to previous input on your Hegel product
14. Mute for Hegel products
15. Volume down for Hegel products

Programming the RC8

The RC8 remote can be used with both Hegel DAC's and Amps. The functions Vol+ Vol- IN+ IN- are customized for each category. You can switch between the two modes by pressing and holding "DAC+ and "DISP" buttons for 15sec.

Changing Battery

The remote control uses two standard 1.5-volt LR03 / AAA batteries. To insert the batteries please use a normal type cross head screwdriver to gently remove the four screws in the bottom of the remote control. Be sure to insert the batteries with the correct polarity with + sign and - sign as shown inside the battery holder.