

Little Fwend™ mounting instructions

Low / High

Pull out the transit “T” securing your fwend.

In the toolkit envelope there is a 1.5mm hex key and mounting discs. In addition to the magnetic metal disc, there is a non-adhesive disc you can place under the mounting disc if you wish an adhesive-free alternative.

Loosen the base set screw and pull out the base and the top part (take care not to bend the trigger antenna). Lower the top part into the base and set aside. Do not tighten the set screw at this point.

Place a 12-inch record on the turntable and point the stylus towards the run-out area approximately 10mm out from the edge of the paper label. Do not lower the stylus.

Peel off 3/4 of the backing paper from the mounting disc and fold it flat.

Lightly adhere the mounting disc straight under the tonearm halfway between the platter and the armbase. Peel off the rest of the backing paper and press down firmly.

Secure the tonearm in its resting position.

Loosen the base set screw and adjust the approximate height of the trigger top part. Lightly tighten the set screw.

Attach the fwend to the mounting disc.

Reset the trigger antenna and lower the stylus in the run-out groove, approx. 10mm out from the paper label.

Check if the height is correct. There should be approx. 1 mm clearance between the rubber beam and the tonearm while the stylus is lowered in the groove. Readjust if necessary.

As a precaution before the final adjustment, raise the stylus up from the groove. Keep the tonearm pointing in the same direction, approx. 10mm out from the paper label.

Rotate the base counter-clockwise until the trigger antenna touches the tonearm tube.

Place the tonearm back in its secure position and reset the trigger antenna.

Check that everything works fine by playing from the end of the last track.

Rotate the magnetically attached base as desired if you want your fwend to trigger earlier or later in the run-out groove. The baseline setting will cover most 12” records.

Before playing the next side, remember to reset the trigger antenna. You might forget to reset your fwend the first day, but this new routine soon becomes second nature.

If you have any questions, do not hesitate to contact us.